


 
 
 







Get comfy with your TV's menu.

Quickly get settled in with your TV's menu (just like you do with your favorite spot on the couch) with this quick start guide. Here's an overview of the icons you'll see when you press **Menu** on your remote.

For the full user guide, please visit our website at wabash.com or call us to request a paper copy.

	Launch the program Guide.
	View and manage your recorded programs.
	Review upcoming PPV events, schedule Reminders, system messages and Caller ID history.
	Shown only if Parental Control settings are enabled, this allows you to turn the function on/off.
	Set preferences for channel blocking and Parental Controls, and create sub-accounts for other users.
	Create a favorite channel list.
	Find programs by title or keyword.
	Purchase events for view in the privacy of your home.
	<i>Currently unavailable.</i>
	<i>Currently unavailable.</i>
	<i>Currently unavailable.</i>

Quick Tips

Change the resolution on your screen by pressing the round green button, then pressing 1. If that resolution doesn't work for your screen, press the round green button, then press 2. If the resolution still doesn't work, try pressing the round green button, then pressing 3. And, lastly, try pressing the round green button, then pressing 4.

Amino boxes (small, rounded box) are being retired and will not accept our newest menu. If you have one of these boxes, please call us for an upgraded box.

If you should experience formatting issues on your TV, please call us at 419.942.1111.

The full user guide can be found on our website or paper copies will be available at our offices.

Stay Connected

YourTV is an app on your mobile device you can use to schedule and manage your favorite programs on your DVR. Download the app and call our office to complete the setup.


WatchTVEverywhere.com is a website you can access from any web-enabled device to watch live TV or programs you may have missed. You'll need your account number, found on your statement, to register. Select Wabash Mutual Telephone as your provider and enjoy!

SmartHub is an app and a website where you can pay your bill and manage your account online.



TV User Guide Quick Start



 Like us on Facebook

6670 Wabash Road • Celina, Ohio 45822
118 E Market Street • Celina, Ohio 45822
419.942.1111 • wabash.com

Menubar is a quick way to access most of the features of your service.



 
Press the **Menu** button on your remote to display the Menubar. Use **◀** and **▶** to move the highlight through the menu to select a feature icon. Then press **OK** to select it. These icons include: Guide, DVR, My Library, Control On/Off, Settings, Favorites, Search, Email, Web, Pay-Per-View and My Media.

Info is an easy way to find information about the show you are watching, what comes on later, and what is on other channels.



Press **Info** on your remote to view more information about a program you are viewing. Pressing **Info** a second time brings up more detailed information. When viewing the Info screen, press **▲** and **▼** to scroll the Infobar through what is playing on other channels. Press **▶** (right) to scroll ahead in time.


Guide allows you to view live programs and schedule recordings, reminders and autotunes.

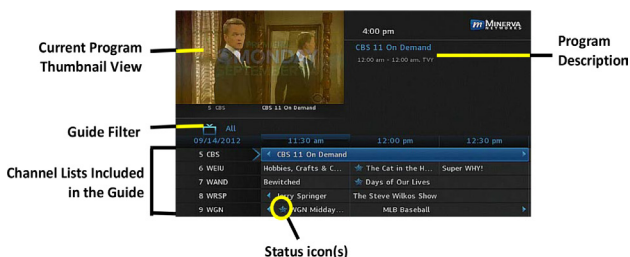

Access the Guide by pressing the **Guide** button on your remote or from the Menubar. When the Guide is displayed, you can use your remote to tune to channels by entering the channel number using the number keypad on the remote. Press **◀** and **▶** to scroll through the Guide forward and backward in time or by pressing **▲** and **▼** to scroll to different channels.


While the Guide is displayed, select the channel and press **OK** to preview the program on the upper-left corner of your TV screen. Press **OK** again to tune to the channel.

 Recording a program is done in the Guide and from the Record button on your remote. *This feature requires a DVR capable set-top box.*

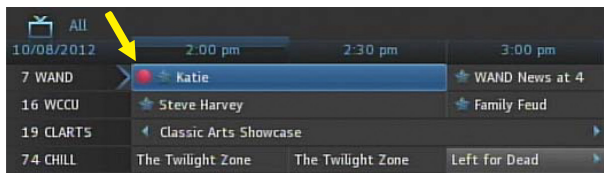

Open the Guide, select the program to record, press **OK**. A pop-up window will appear. Select Record and press **OK**. The program now shows a red recording symbol. Access the DVR menu from the Menubar to review and organize your recordings.

 Favorites is a channel list you can create of your most watched channels.

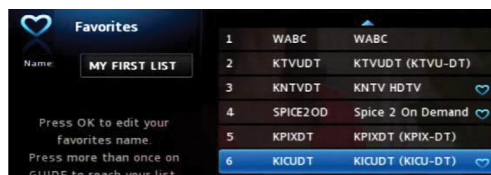


Create a Favorites list by opening the Favorites application in the Menubar. Select Create from the list and press **OK**. Select the list Name and enter using the keypad. Press **▶** (right) and then **▲** and **▼** to select a channel you want to add to the list, then press **OK**. A heart icon appears to the right of the selected channel.

NOTE: While the Guide is displayed, press the **Guide** button repeatedly to cycle through the lists. Example: All - displays all channels, Favorites - displays a list you've created favorite channels. Guide filters (lists) include: All, Subscribed, SD, HD, PPV and Favorites. Leave the Guide on Subscribed or Favorites to avoid channels that are not available in your subscription.

Search allows you to search for the title or part of the title of a program.

Press the **Menu** button on your remote to display the Menubar, select Search and press **OK**. When the Search screen appears, press **OK** on the search entry field to bring up the keyboard. Use **▶**, **◀**, **▲** and **▼** to select the letters on the on-screen keyboard. When complete, select Done and press **OK**. Then, select the on-screen Search bar and press **OK** to view your search results.

 Parental Control

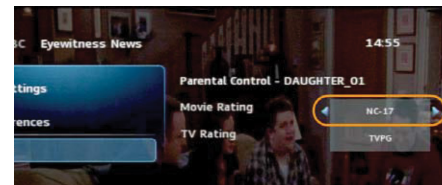

Turning Parental Control On: Press **Menu** and select Settings from the Menubar, enter your password to gain access. Select Preferences. Arrow to Parental Control. Press **OK** to check the box. Select Submit, and you will be returned to live TV.

Next, go back to Settings, enter your password to gain access. Select Users. Arrow to Parental Control and press **OK**. Set both movie and TV ratings. When complete, arrow down to Submit and press **OK** to turn on Parental Controls.

Turning Parental Control Off: Press **Guide**, then select the restricted program and press **OK**. In the dialogue box that appears, select Unlock Parental Control and press **OK**. Enter your password to gain access.

Caller ID displays the caller's name and phone number on your TV screen during an incoming call. *This feature requires subscription to Caller ID.*

Press **Menu** and select Settings. Enter your password to gain access. Select Preferences. Arrow to the Enable Caller ID box and press **OK** to check the box. Arrow to change the Caller ID Timeout. Then, arrow to Submit and press **OK**.



To view previous calls, press **Menu** and select My Library, press **OK**. In My Library, arrow to Caller ID. This will show a list of who has called, their telephone number, and the date and time of the call. To delete, select the list and press **OK**.

Pay-Per-View allows you to watch a variety of content in the comfort and privacy of your home.

Press the **Menu** button on your remote to display the Menubar, select PPV and press **OK**. The PPV list will appear on the Guide menu. Select the program you want to purchase and press **OK**. The Buy PPV screen appears. Select Buy PPV, enter your PIN using the remote number pad, and enjoy watching your program.