


# Remote Guide

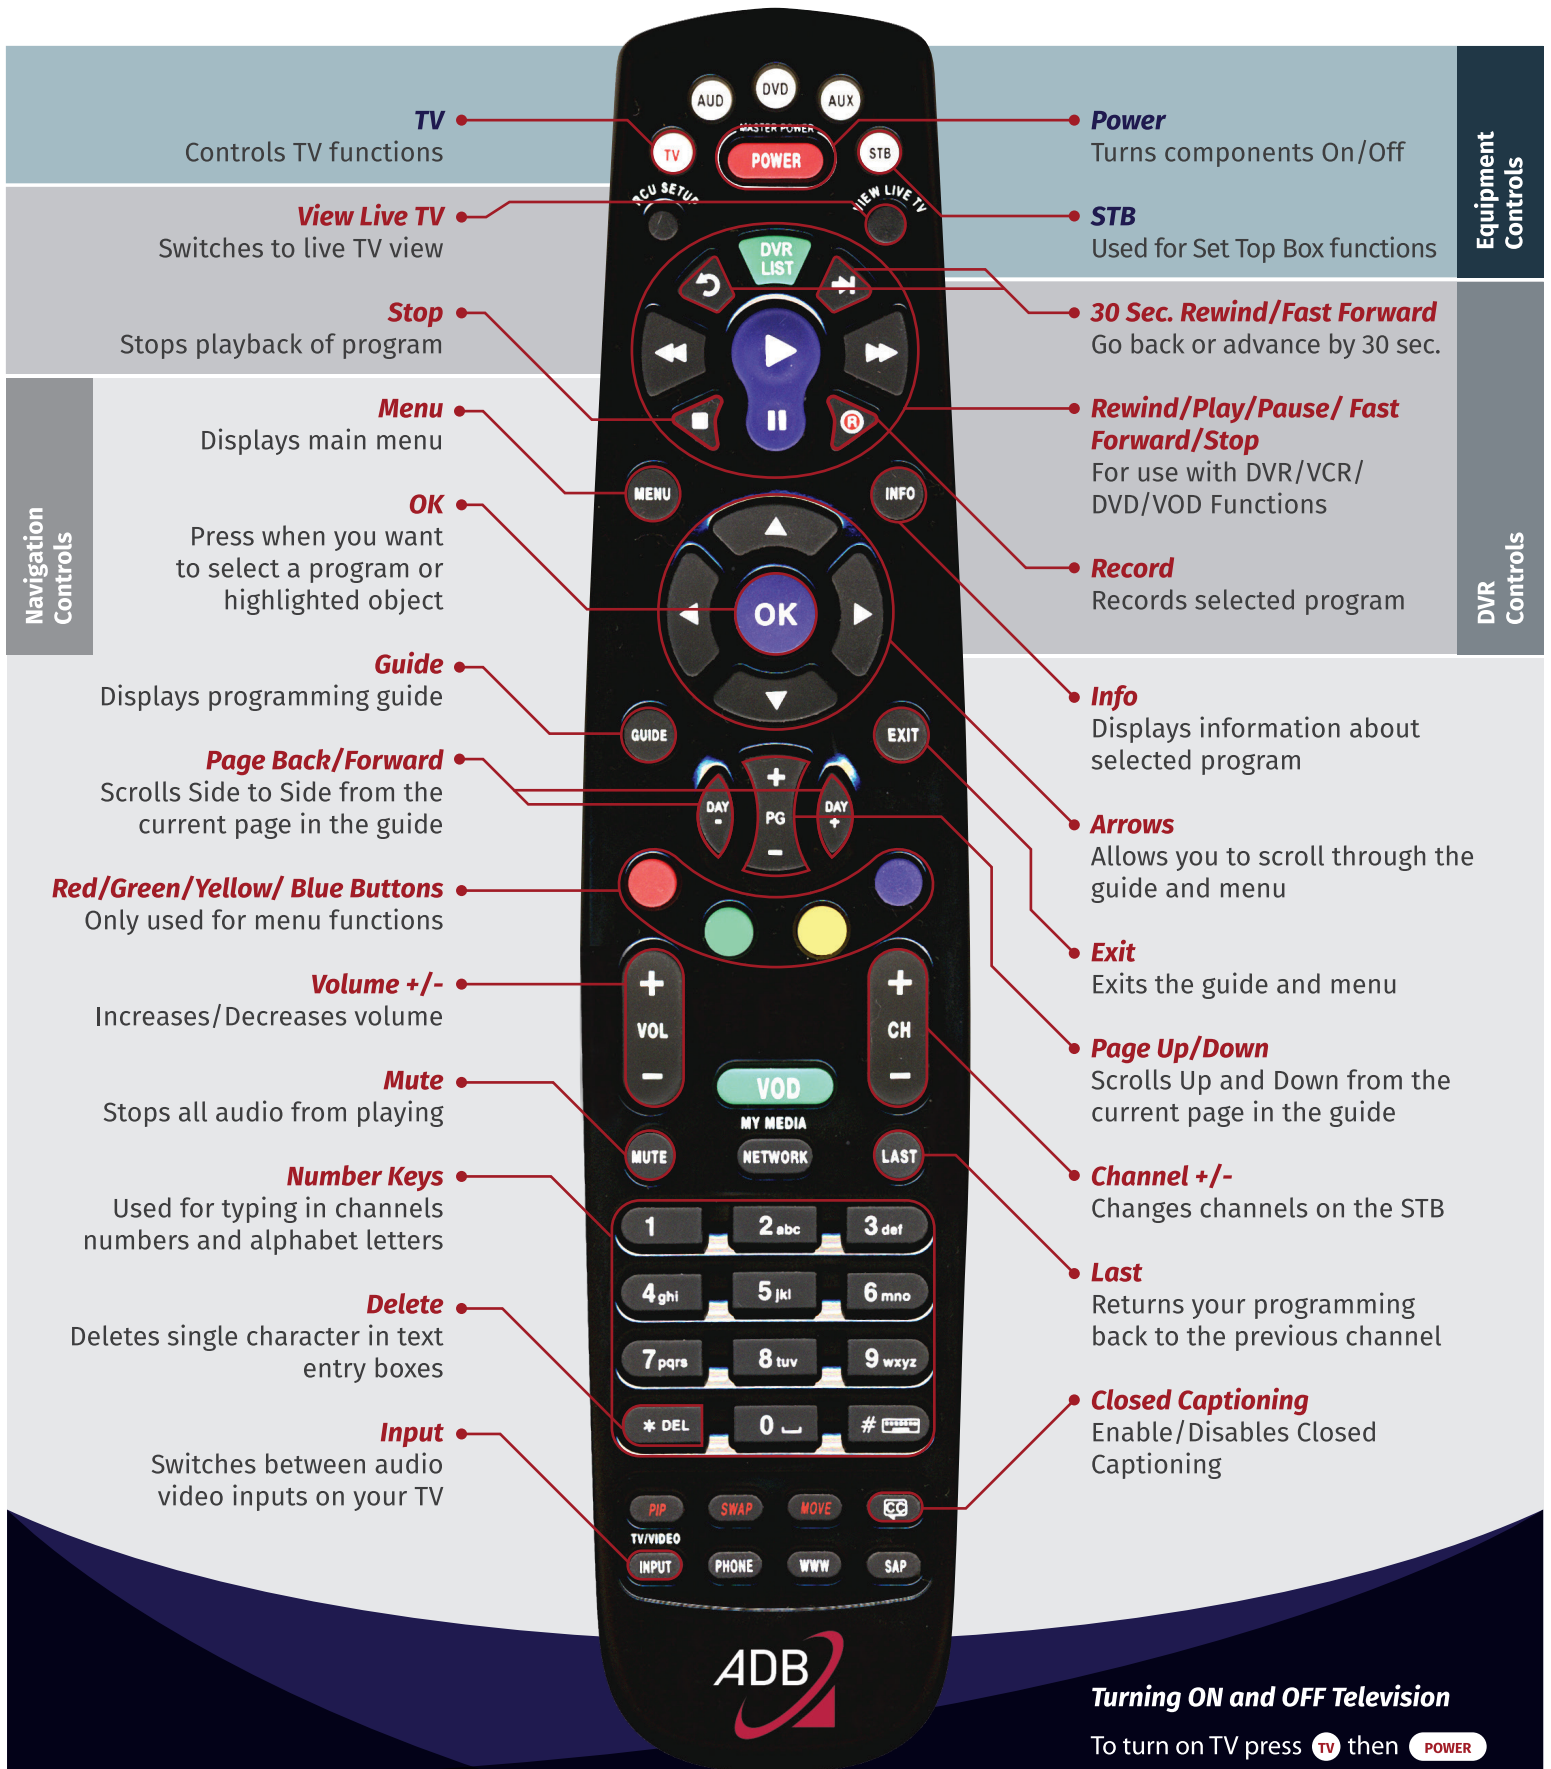

Navigation Controls

Equipment Controls

DVR Controls

**TV**  
Controls TV functions

**Power**  
Turns components On/Off

**View Live TV**  
Switches to live TV view

**STB**  
Used for Set Top Box functions

**Stop**  
Stops playback of program

**30 Sec. Rewind/Fast Forward**  
Go back or advance by 30 sec.

**Menu**  
Displays main menu

**Rewind/Play/Pause/ Fast Forward/Stop**  
For use with DVR/VCR/ DVD/VOD Functions

**OK**  
Press when you want to select a program or highlighted object

**Record**  
Records selected program

**Guide**  
Displays programming guide

**Info**  
Displays information about selected program

**Page Back/Forward**  
Scrolls Side to Side from the current page in the guide

**Arrows**  
Allows you to scroll through the guide and menu

**Red/Green/Yellow/ Blue Buttons**  
Only used for menu functions

**Exit**  
Exits the guide and menu

**Volume +/-**  
Increases/Decreases volume

**Page Up/Down**  
Scrolls Up and Down from the current page in the guide

**Mute**  
Stops all audio from playing

**Channel +/-**  
Changes channels on the STB

**Number Keys**  
Used for typing in channels numbers and alphabet letters

**Last**  
Returns your programming back to the previous channel

**Delete**  
Deletes single character in text entry boxes

**Closed Captioning**  
Enable/Disables Closed Captioning

**Input**  
Switches between audio video inputs on your TV

**PIP**  
Picture in Picture

**TV/VIDEO INPUT**  
Switches between TV and Video inputs

**Turning ON and OFF Television**

To turn on TV press **TV** then **POWER**  
Press **STB** to control our set top box  
To turn off TV press **TV** then **POWER**

