



**TV**

Controls TV functions

**30 Sec. Rewind**

Go back by 30 seconds

**Stop**

Stops playback of program

**Menu**

Displays main menu

**Guide**

Displays programming guide

**Day Next/Previous**

Scrolls 12 hours ahead or back from the current time in the guide

**OK**

Press when you want to select a program or highlighted object

**Yellow/Blue/Red/Green**

Only used for menu functions

**Volume +/-**

Increases/Decreases volume

**Mute**

Stops all audio from playing

**Number Keys**

Used for typing in channel numbers and alphabet letters

**Input**

Switches between audio video inputs on your TV

**Delete**

Deletes single character in text entry boxes

**Power**

Turns components On/Off

**STB**

Used for Set Top Box functions

**Live**

Switches to live TV view

**Record**

Records selected program

**Rewind/Play/Pause/  
Fast Forward/Stop**

For use with DVR/VCR/DVD/VOD Functions

**Exit**

Exits the guide and menu

**Info**

Displays information about selected program

**Page Up/Down**

Scrolls Up and Down from the current page in the guide

**Arrows**

Allows you to scroll through the guide and menu

**Channel +/-**

Changes channels on the STB

**Last**

Returns your programming back to the previous channel

**Closed Captioning**

Enables/Disables Closed Captioning

Equipment Controls

DVR Controls

Navigation Controls

**Turning ON and OFF Television**

To turn on the TV, press **TV** then **POWER**. Press **STB** to control the Set Top Box. To turn off the TV, press **TV** then **POWER**.